



# “THE STICK” USB RFID READER



## *SIMPLY SCAN!*

So simple anyone can use it. NO drivers, software, programming or complicated setup... simply plug The Stick into an available USB Port on most devices. The unique ChipID is automatically typed into the current application on your device.

Optimized to read small plug tags (<8mm) embedded in metal, plus other HF tags (ICode, etc.)

Stylus tip for use on various handhelds.

Comes with multiple cable options.

*Works like a USB keyboard... simply scan to send the unique ChipID to the current application*

### InfoChip “The Stick” USB RFID Reader Specifications:

RFID	HF 13.56MHz including ICode, etc.
Read Mode	Read Only (ChipID/TagID/UID)
Operating Modes	USB Powered
Read Range	Up to 4cm
Size (mm)	84mm x 23.4mm x 10.2mm (3.30" x 0.92" x 0.40")

Part Number	RDR-HF-USBSTICK8
USB	Standard USB (cable included)
Compatibility	Most devices supporting USB HID keyboard profile incl. handhelds/laptops/tablets/desktops

Visit [www.infochip.com](http://www.infochip.com) to view our demo videos and learn more about the InfoChip suite of tags, readers and asset management software. For pricing and details, please email [sales@infochip.com](mailto:sales@infochip.com) or call Toll Free 1-844-414-8247 in the US or 1-877-747-2447 in Canada or the US.

**Where is it?**

**What is it?**

**Is it safe to use?**

(877) 747-2447

[sales@infochip.com](mailto:sales@infochip.com)

[www.infochip.com](http://www.infochip.com)